 



Airwheel
www.airwheel.net

S8 Mini

USER MANUAL

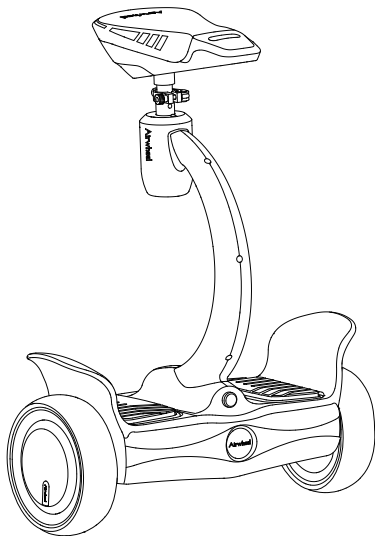


 Check Packing Contents

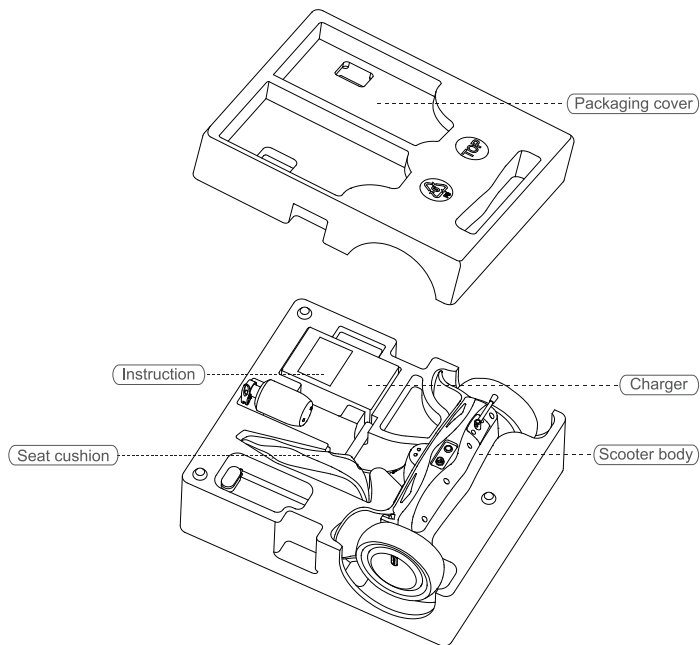

Scooter body	1 piece	Instruction	1 unit
Seat cushion	1 piece	Charger	1 piece

 Diagram

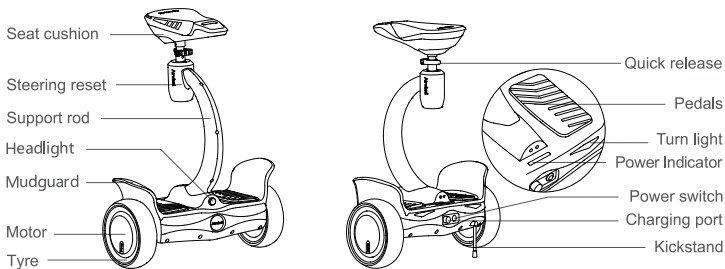


Note : Please turn on/off headlight via the App(setting-light control).


Specifications

Specifications	Parameters	Remark
Item weight	~15.5kg	Standard accessory
Max. speed	~17km/h	
Max. permissible gradient	~15°	Riders weighing 60kg get up to 18°
Battery capacity	260/343Wh	
Applicable temperature	-10°C~40°C	Best at 20~30°C
Max. load	100kg	
Charging voltage	AC220V 50~60Hz	
Charging time	260Wh:~180min/343Wh:~200min	
Size	713mm x 507mm x 329mm	
Tire size	8 inch	
Bottom case to ground	53mm	

 Put Together the Scooter

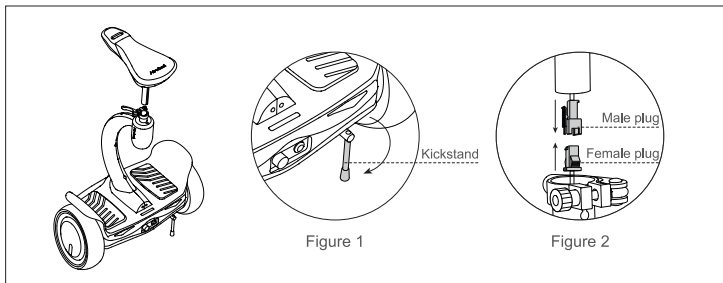


 - 1 Take out the scooter body, unfold the Kickstand (see Figure 1); take out the seat cushion, align the male plug in the seat cushion with the female plug in the supporting rod (see Figure 2) and buckle up.

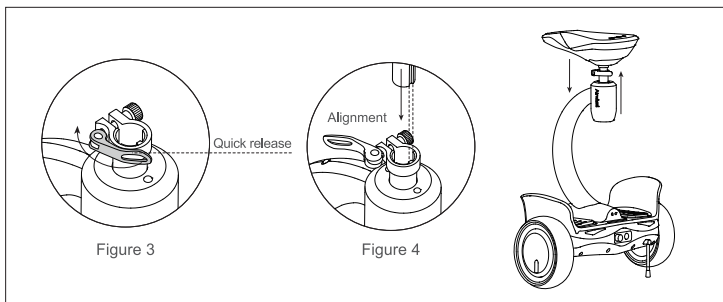


- 2 Unlock the quick-release on the supporting rod (see Figure 3), align the notches in the seat and supporting rod (see Figure 4), and lock the quick-release. When adjusting the height, unlock the quick-release first and adjust the seat cushion to the proper position and then lock the quick-release.

 
Don'ts

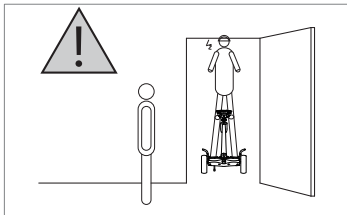


Entrance Height

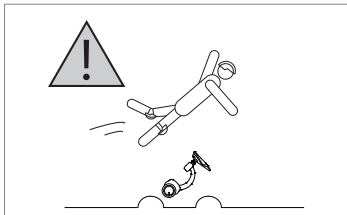 


Bumpy Terrains

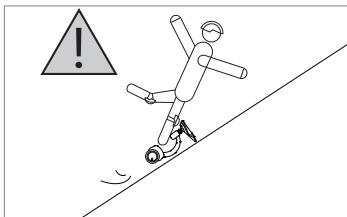 


Slope Angle $> 15^\circ$

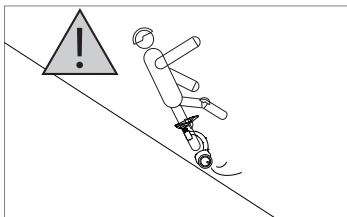 

Slope Angle $> 15^\circ$

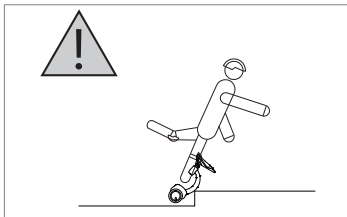 

Staircases

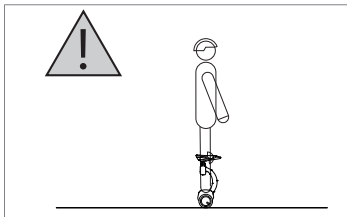 

Do not remain on the standing board after shutdown

Safety

 
 
 
There are risks of riding or driving any vehicle. S8Mini is no exception. Please make sure this manual is read through and fully understood before initial use. And be cautious when riding.

Important Note:

1. Sharp acceleration or deceleration or speeding via overly leaning forward or backward are strictly forbidden.
2. Do not care about the vehicle if there is an emergency. Safety goes first.

Attention:

1. Do wear helmet, gloves, elbow/knee pads or other necessary protection gears.
2. Do not ride on the bumpy and wet roads, such as earth road, cobbled road or snowing and watery roads.
3. Do not ride S8Mini on slopes of over 15° gradient.
4. Do not allow children under 15 or the aged above 60 to ride S8Mini.
5. Drunk or drug riding S8Mini is prohibited.
6. Do not ride S8Mini in extremely cold winter.
7. Do not ride S8Mini in the rain.
8. Do keep slow speed when riding S8Mini on slopes.
9. Do not ride S8Mini in other unadvised situations caused by either personal or objective reasons.
10. To charge, first connect the battery charge interface, then the power source.
11. When it is not in use for a long time, please store it after fully charged and shutdown. It should be charged no more than 3 months and then store it.
12. This product might be limited to use on private road (check the regulations in force in the territory of use). We recommend using suitable protective equipment.

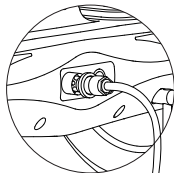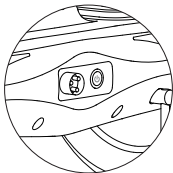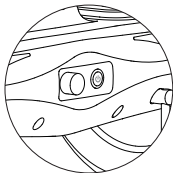

Open the cover near the charging port, connect the charger plug to charge. In charge, it is red and it will turn green after it is fully charged.

 
You need lots of practice to grasp the skill before you ride the scooter safely. If you are not skilled, or fail to follow the user guide of this product, it may cause rider or the third part physical injury or property loss. Our company only takes the responsibility for product defects or damage, and we are NOT responsible for physical injury or property loss related with using products.

Safety Guidelines and Riding Etiquettes

1. Please understand and comply with local traffic regulations when riding.
2. Please ride in a civilized way to ensure the safety of yourself and people around you.
3. Respect others' right to use the road. When passing through the pedestrian, riders should slow down and warn the walkers, it is better to pass through from the left. When the riders and walker are face to face, it is better to keep on the right and lower speed.
4. Keep a safe distance from other riders , please don't ride side by side.
5. Do not ride in the bad light condition, if necessary, please reduce the speed, be alert and use the external driving lights to ensure a good vision.
6. Please keep your body relaxed when riding.


Get Started

1. Check the scooter to make sure everything is normal and then fold up the kickstand.
2. Turn on the main power switch. Hear the "beep" prompt tone and S8Mini enters into power state.
3. Step on the pedal slightly and after hear the "beep" sound,S8Mini is ready to be ridden and maintain balance.Then riders can ride it.

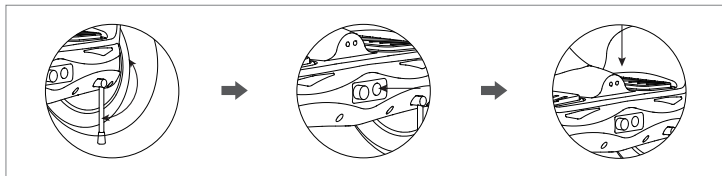


Learn to Steer

 
o Stand to ride

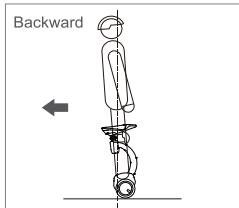

 
The body center of gravity slowly leans back.

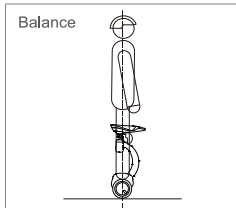


Keep balance of body center of gravity.

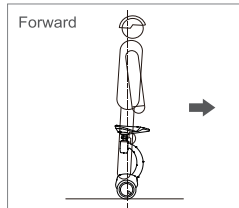 

 
The body center of gravity slowly leans forwards.

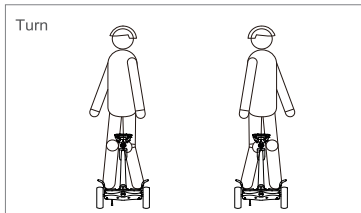

 Twist the seat with legs to turn left and right.

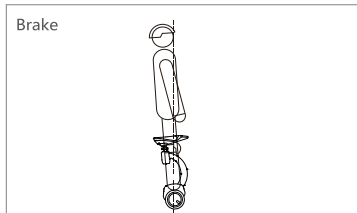


 The body center of gravity leans backward to stop.

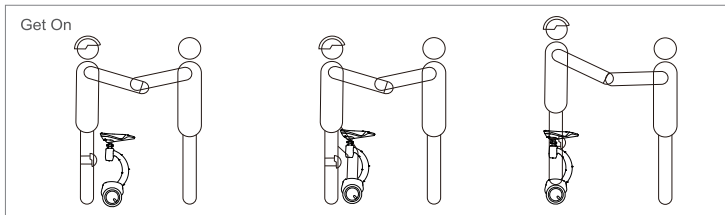


Put feet on the pedals one by one. Keep balance of body center of gravity, do not shake back and forth.

 
o Sit to ride

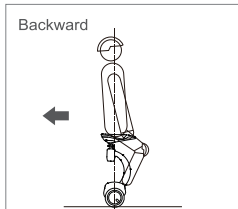

 
The body center of gravity slowly leans back

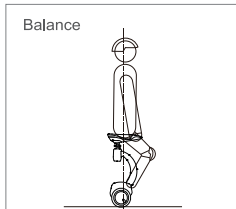


Keep balance of body center of gravity

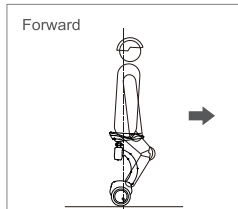 

 
The body center of gravity slowly leans forwards

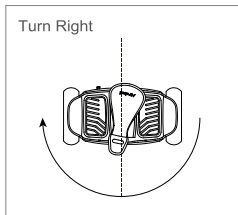


The body turns right

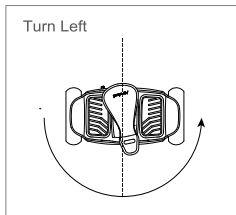 

The body turns left.

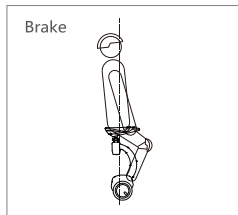 

 The body center of gravity leans backward to stop.

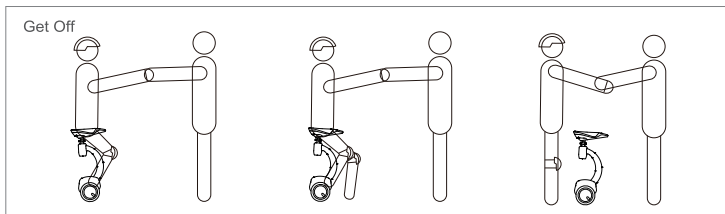

Riders get off the vehicle one foot by one foot. Keep balance of body center of gravity, do not shake back and forth

Download APP

 


Scan QR code to download


*Support Android 4.3 or higher, iOS 7.0 or higher.

APP Instructions

1. Turn on S8Mini power button, and start App as well as Bluetooth.
2. Click the search button and do as the follows to connect(verify password is 11111111).
3. Refer to official website or give calls for details.

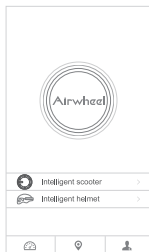

 
Click the Intelligent scooter in the App interface.

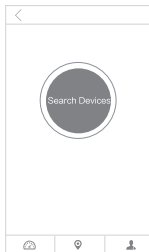


Click the search button or .



 
Search Airwheel nearby, click the searched Airwheel model to connect.

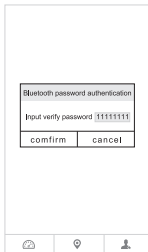

 Input the verify password: 11111111 to connect.

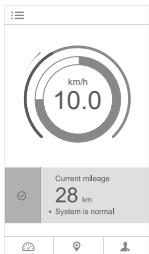

 Click the main interface button  to open the sidebar.

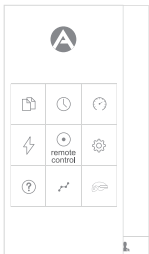



Click the remote control button in the sidebar to open the remote control interface.



Move the button  to operate the intelligente scooter going forward, backward or turning.



Slide the control speed button , and click the icon  to switch to the hand-operation mode.

Warranty

Please properly keep the warranty card and purchase invoices as after-sales credential. S8Mini will provide the following after-sales services providing not damaged by the user.

After-sales Service

1. The electric scooter will be guaranteed for one year, except the batteries and consumable items.
2. We can maintain the battery and charger for half year; since tires belong to consumable material one month is provided for maintenance.

Following circumstances are not included in the free repairing scope.

1. Malfunction is caused by users who are not in accordance with the provisions of the operation instruction handbook to use, maintain and adjust.
2. Damage and failure is caused by users' self-refit, self-repair and without compliance with application regulations.
3. Failure is caused by user improper safekeeping or accidents.
4. There is no warranty card and invoice or discrepancy between the vehicle and the card.
5. The appearance damage after using does not belong to the warranty scope.
6. Self-demolition piece used is excluded from User Manual.
7. Damage is caused riding in the rain and soaking in water.
8. Battery damage caused by water permeation is not covered under the warranty.

QUALIFICATION CERTIFICATE

Doc. No. : V2.1.3

Record of extended warranty

Part Name		Start Date of Extended Warranty		Extended Period	
Part Name		Start Date of Extended Warranty		Extended Period	
Part Name		Start Date of Extended Warranty		Extended Period	

Please refer to the mars rover official website for latest info update.

User Info

Name: _____ Tel: _____ Email: _____

Address: _____

Product Info

Model: _____ Service Center: _____

Repair Date: _____

Repair Details: _____

Cause of Malfunction: _____

SN: _____

Signature of the Repairman: _____

Seal of the Service Center

Aftersales Info

Please visit our official website for the address of the service center and other related info.

Authorized by: Airwheel Holding Limited

Manufactured/Dealed by: Changzhou Airwheel Technology Co., Ltd.

Address: 5th Floor, No. 10 building, High-Tech Park, Kewu Road,
Changzhou, China

Website: www.airwheel.net

E-mail: after-sale@airwheel.net



www.airwheel.net

Data is only for reference. Be subject to the real object.